

# **VOCAL-STAR**

**VS-P120**

**12" PA SPEAKER**

**300W**

 
**Operating Instructions**

FURTHER FAQ'S, TROUBLESHOOTING AND INFORMATION AVAILABLE  
ON THE PRODUCT LISTING PAGE [WWW.VOCAL-STAR.COM](http://WWW.VOCAL-STAR.COM)

**CUSTOMER SUPPORT: [INFO@VOCAL-STAR.COM](mailto:INFO@VOCAL-STAR.COM)**


 Please carefully read the operating instruction before using our product

## BACK PANEL QUICK GUIDE

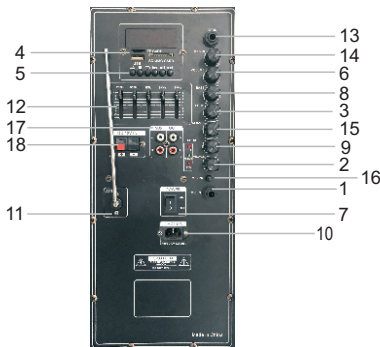

1. MIC INPUT
2. MICROPHONE VOLUME
3. ECHO
4. USB/TF/SD/CARD/AUX/LED
5. :MODE  
 :REC  
 :REPEAT  
 :PREVIOUS SONG  
 :PLAY/PAUSE  
 :NEXT SONG
6. MAIN SPEAKER VOLUME
7. POWER:ON/OFF
8. BASS
9. MIC TREBLE
10. AC INPUT 100-240V/60-60Hz
11. ANTENNA FOR FM RADIO
12. EQUALISER ADJUSTMENTS
13. GUITAR / 2ND MIC INPUT
14. GUITAR / 2ND MIC ADJUST
15. MIC BASS
16. MIC PRIORITY
17. AUX OUT L/R
18. DC 12V INPUT

## HOW TO USE RECORD

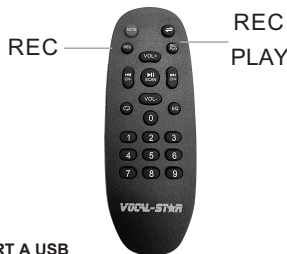 

### HOW TO USE RECORD (VOICE ONLY)

#### STEP 1

MAKE SURE THE P120 IS SWITCHED ON AND INSERT A USB STICK OR TF CARD INTO THE APPROPRIATE SLOT

 
#### STEP 2

ENSURE THE MICROPHONE (WIRED OR WIRELESS) IS WORKING BY SPEAKING.

#### STEP 3

PRESS "REC" TO START, PERFORM TALK / SPEECH, PRESS "REC" TO STOP. PRESS "REC/PLAY" TO PLAY RECORDING BACK

## REMOTE CONTROL INSTRUCTIONS

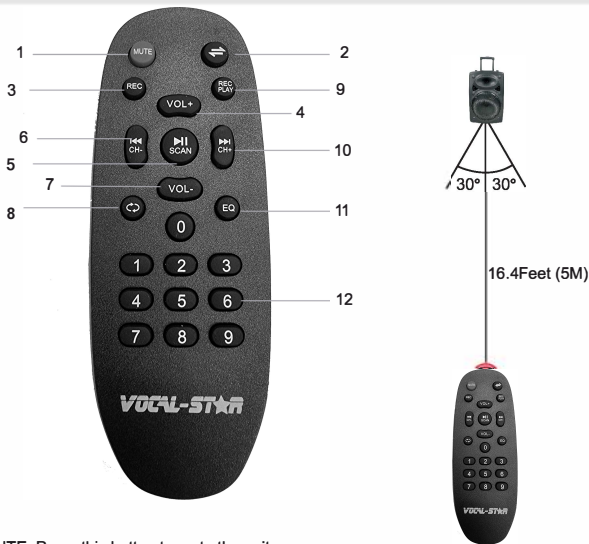

1. MUTE: Press this button to mute the unit.
2. Press this button to toggle between the various inputs(AUX,USB,SD,FM,BLUETOOTH),  
- Long press this button to turn on/turn off the voice prompt.
3. Press this button to start recording.
4. Press this button to increase the master volume for the unit.
5. Press this button to pause or play the unit when it is in USB mode.  
- In FM Radio mode, press this button to auto scan all channels.  
- Long press to change the language between Chinese/English for the voice prompt.
6. Press this button to select the previous song/channel.
7. Press this button to reduce the master volume for the unit.
8. Press this button to repeat one/repeat all.
9. Press this button to play the recording.
10. Press this button to select the next song/channel.
11. Press this button to the EQ mode of Normal,Jazz,Rock,Pop,Classical.
12. 0-9,Key number for selecting the certain songs in the USB/SD/TF Card.

## BLUETOOTH INSTRUCTIONS

### STEP 1

Press the mode button until "Bluetooth" is shown on the P120 display.

### STEP 2

Enable Bluetooth on the device you wish to pair and select the P120, which will be displayed as "Bluetooth Speaker".

### STEP 3

The P120 should make an audio sound to confirm Bluetooth connection. Please note if your device can not find the P120, ensure all other nearby devices have their Bluetooth switched off.

*Tip: You can control the sound of the P120 from your selected device (phone / tablet etc) once connected to Bluetooth.*

## CHARGING INDICATOR

Charging: the led light will be in red color

Full: when full-charging the led light will be in green color

Charging time : 6 to 7 hours

Working time : 3 to 4 hours

Please note that working time will up to 8 hours used as just a speaker.

## TECHNICAL SPECIFICATIONS

- Bluetooth version: 4.3
- Frequency range: 2.4-2.48Ghz
- Working distance: up to 15 meters in open space
- Supporting: USB/SDcard play
- Remote Control: up to 5 meters in open Space
- Output power: 300W
- Distortion:  $\leq 1.0\%$
- Frequency response: 180Hz – 20Khz
- Microphone sensitivity: -40dB
- Working time: Music time 3 to 4 hours
- Input jack: Aux input ,wired microphone input
- Charging input power: DC 12V INPUT
- Charging time: 6 to 7 hours

## BATTERY INFORMATION

1. THE SPEAKER HAS A BUILT IN RECHARGABLE BATTERY. PLEASE PLUG IN TO AN ELECTRICAL SOCKET WITH THE CORRECT INPUT TO CHARGE.
2. WHEN THE P120 IS CHARGING, PLEASE ENSURE THAT THE PRODUCT IS SWITCHED OFF.
3. PLEASE CHARGE THE P120 FOR 8-10 HOURS FOR THE FIRST USE. FROM THEN ON, PLEASE CHARGE FOR 6-7 HOURS.

## BATTERY ADVICE

1. IN ORDER TO PRESERVE THE BATTERY LIFE, PLEASE FULLY CHARGE THE BATTERY UP ONCE IT HAS BEEN DRAINED DOWN. DO NOT LEAVE THE PRODUCT FOR LONG PERIODS WITH AN EMPTY CHARGE.
2. IF YOU HAVE ANY ISSUES WITH THIS PRODUCT, CONTACT OUR CUSTOMER SERVICES TEAM OR SEEK ADVICE FROM A QUALIFIED ELECTRICIAN.

## WARRANTY INFORMATION

**All products have a six month warranty as standard. Registration is required to extend this to twelve months. Be sure to register for the additional six months by visiting the link below and completing the form. You will be sent a reply immediately with the warranty reference number. Be sure to keep this safe - as it will be required when making a claim. Register within 30 days of purchase.**

**Please note cables, leads, remotes, CDs and microphones are not covered under warranty.**

**TO REGISTER - VISIT  
[vocal-star.com/warranty-registration](http://vocal-star.com/warranty-registration)**