

VOCAL-STAR



Model: VS-PPA

OWNER'S MANUAL



IMPORTANT SAFETY INSTRUCTIONS

 
To ensure safe use, please read this instruction carefully before using this product and use it in a right way according to the instruction. Please keep this instruction properly for future reference .

1. Do not use this apparatus near water.
2. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
3. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
4. Unplug this apparatus during lightning storms or when unused for long periods of time.
5. To disconnect this apparatus from the AC mains completely, disconnect the adapter plug from the AC receptacle.
6. Don't plug or unplug the power supply with wet hands to prevent the electricity shock.
7. Do not expose batteries to excessive heat such as sunshine, fire or the like.
8. This apparatus is intended to be used only with the power supply and/or charging cable provided by the manufacturer.
9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power- supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, has been dropped, or is missing battery doors.
10. If you do not use this product for a long time, please turn off the power and unplug the power supply.

11.

CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

Note: To prevent possible hearing damage, do not listen to high volume levels for long periods

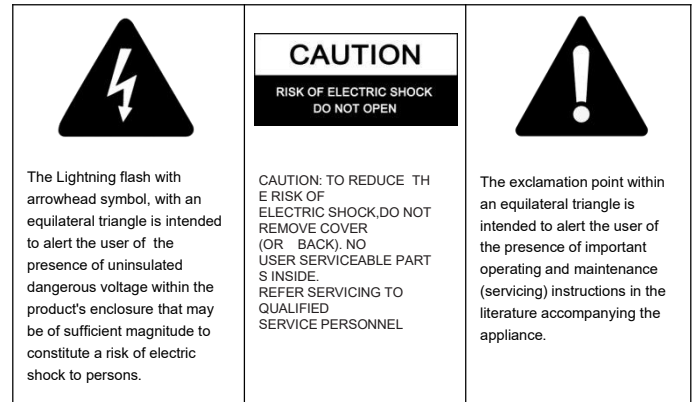


This product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for the recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment or manufacturer of the equipment.



Instructions for Users on Removal, Recycling, and Disposal of Batteries

The remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery, it becomes necessary to replace such a battery; this procedure must be performed by authorized services centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

REMOTE CONTROL

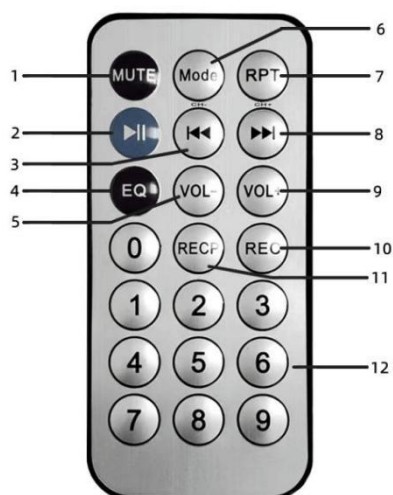

1. Mute button: mute / restore sound
2. USB playback status: play / pause (FM status: search for next station / stop station search)
3. USB playback status: previous song (FM status: previous radio station)
4. USB or wireless connection playback status: 5-band equalizer sound switching
5. Master volume decreases
6. AUX-USB-Wireless connection-FM modes switch button
7. Repeat play button under USB and TF card state, single cycle, all cycle, cancel cycle
8. USB playback status, next song (the next radio in FM status)
9. Master volume increased
10. Recording button
11. Play the recording
12. Digital song selection key in USB state, you can select channels in FM state .

FUNCTIONAL DESCRIPTION



1. AUX audio input
2. Lights switch
3. Main power switch
4. Wired microphone input jack
5. USB input jack
6. TF card input jack
7. Master volume control knob
8. Bass control
9. Treble control
10. Microphone reverb control
11. Microphone volume control
12. DC 9V charger input jack

WHAT'S IN THE BOX

- *Speaker*1
- *Wireless microphone*2
- *DC adapter*1
- *Audio cable*1
- *Remote*1

PRODUCT OVERVIEW

Product code: VS-PPA

Peak Power: 300W

Battery capacity: 3600mAH

Speaker unit: 12 inch bass*1+Tweeter*1

Microphone frequency: 173.5Mhz / 174.5Mhz

CHARGING

VS-PPA is powered by a built-in rechargeable lithium battery.

IMPORTANT:

- Fully charge the built-in battery before using it for the first time, which will prolong the battery lifespan.
- Charge the battery before and after each use
- Similar to a car battery - Charge the built-in battery at least every 30 days.
- Always switch off the device if not in use.
- Disconnect DC adapter when it is fully charged.
- Deep discharging or over-charging of the battery must be avoided to ensure sufficient lifetime and sometimes also the operation safety of these batteries.

USING YOUR VS-PPA

Bluetooth Connection

You can use your VS-PPA as an external speaker for your Bluetooth-enabled smartphone or tablet.

1. Press Mode to enter Bluetooth pairing mode.
2. Choose "VS-PPA" to connect.
3. Once successfully connected, audio will stream from your Bluetooth device to this speaker.

USB Connection

With your VS-PPA, you can enjoy music that is stored on a USB storage device such as an MP3 player. Plug your USB storage device into the USB port of your VS-PPA. The music will play automatically. If not, please check if the USB device contains playable audio contents.

Recording

Insert a TF Card or USB memory stick and press "REC" button to start recording. To stop recording press "REC" button again to stop recording.

AUX INPUT Connection


Note:

- To play music on your device through this speaker, make sure that no Bluetooth connection, USB device, or AUX connection is available.

Connect a pair of RCA audio cables to:

- the RCA audio output sockets (red/white) on the device (TV, DVD player, etc);
- the INPUT (AUX) connectors on the speaker.

TWS FUNCTION

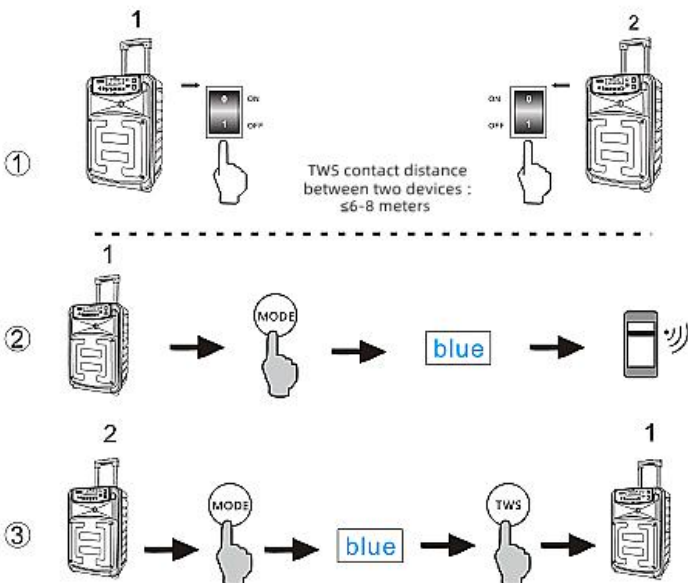

Detailed operation of serial Bluetooth TWS

*Must have two devices of the same model

1. When the first device is switched to "BLUE*" mode, when the Bluetooth connection to the mobile phone hears two beeps, it means the connection is successful, and the device defaults to the host.
2. The second device switches to the "BLUE" mode, press and hold the "TWS" button for 2 seconds, after hearing the prompt, TWS succeeds with the host, and the device defaults to the slave.

Exit Bluetooth TWS

*In the BLUE" state, press and hold the master or slave "TWS" button for 2 seconds to exit Bluetooth TWS.

TROUBLESHOOTING

Caution:

- **Never try to repair the product by yourself. If you have any problems while using this product, check the following points before you request service.**

System

The unit will not turn on.

- Check if the power cord is plugged into the outlet and to the device.
- For "VS-PPA" make sure the speaker is fully charged, if not use the power cord to turn on your speaker.

Sound

No sound from the device.

- Make sure that the device is powered on.
- Make sure that the volume level is turned to an audible level.
- Make sure that it is connected to a music source.

Bluetooth

A device cannot connect with the VS-PPA.

- Check if you enable the Bluetooth function of the device.
- The device is already connected to another Bluetooth device.

Poor audio quality from the connected Bluetooth device.

- The Bluetooth reception is poor. Move the device closer to the VS-PPA, or remove any obstacle between the device and the speaker.
- **Bluetooth keeps dropping out or poor audio quality – likely the speaker battery is low. Please fully charge the speaker.**
- **For more advice please contact Vocal-Star**
www.vocal-star.com / Tel: 01202 670929